

Husqvarna TS73R

Pièces de rechange

Spare parts

Ersatzteile

Piezas de repuesto


Ricambi


Onderdelen


Reservdelar


Peças sobresselentes


No.	Pos.	Description	No.	Pos.	Description
115 030 020	E	Operating Manual TS73R	543 850 190	C	Screw, ST 4,2x19 large head
115 029 920	E	Illustrated Part List TS73R	543 850 216	D	Indexable handle, nut M8
505 540 901	D	Flange, inner	543 850 217	E	Sticker, Read manual + use ear prot.
543 044 590	B-C-D	SCREW, hex M6X16	543 850 315	E	Sticker, WEEE
543 044 592	D	Screw, hex M6X25	543 850 406	C	Support ball bearing carriage (machined)
543 044 599	B	Screw, hex M8x16	543 850 409	C	Switch support
543 044 600	A-C	Screw, Hex M8X20	543 850 411	D	Cable support
543 044 601	A-C	Screw, Hex M8X25	543 850 412	C	Spacer
543 044 603	D	Screw, hex M8x35	543 850 413	C	Adjustment axle
543 044 615	B	SCREW, hex M10X25	543 850 414	B	Rail
543 044 707	A-B-C-D	WASHER, 6	543 850 415	B	Rail up lg 900
543 044 708	A-B-C-D	WASHER, 8	543 850 416	B	Rail down lg 895
543 044 717	A	WASHER, 6 Large	543 850 417	A	Table
543 044 749	A-B-D	NUT, M6, HH (thicker)	543 850 420	D	Spacer, blade guard
543 044 898	B-D	WASHER, 8.4/25/2.5 PVC	543 850 423	D	Rubber handle d22
543 045 069	E	Pass wire M9	543 850 424	D	Mud flap
543 045 074	E	Nut, plastic M9 for pass wire	543 850 453	A	Stop for front feet nut
543 045 092	E	Terminal block	543 850 454	A	Stop for rear feet nut
543 045 131	E	SWITCH KEDU 230V	544 944 301	A	Tank, plastic
543 045 132	E	SWITCH KEDU 115V	544 944 401	A	Frame, welding assy
504 031 902	E	Pump, black 110V 50 Hz	544 944 501	A	Legs, welding assy
504 031 901	E	Pump, black 230V 50 Hz	544 944 601	C	Cover lid, plastic
543 045 236	E	Electric pod D4	544 944 701	C	Reinforcement plate, blade guard
543 045 577	D	Hose 6x9	544 944 801	D	Blade guard, fixed
543 045 620	D	Y-coupling for hose	544 944 901	D	Blade guard, cover
543 045 738	E	Sticker, Using of pump	544 945 001	D	Motor assy, support
543 045 778	E	Sticker, Noise 66	544 945 101	B	Upright, front
543 045 871	E	Sticker, Stop	544 945 201	B	Upright, rear
543 045 895	A	Wrench 19 DIN 894	544 945 301	A	Material support, table
543 045 967	B	Rubber stop	544 945 401	C	Articulation, with locking
543 046 031	A	Feet pad	722 781 802	E	Rivet 3x6 aluminium, for name plate
543 046 051	A	Plug, rubber 34D 28/34/30	722 794 402	D	Rivet, aluminium 4x10 - large head
543 046 084	A-B-D	Nut, plastic wrenchhead M8	724 336 851	A	Screw, Countersink bolt M6x16
543 046 214	D	SPRING OF TORSION 39761	725 237 061	B	Screw, M6x20, autothreading
543 046 892	E	MOTOR 1KW 230V 2P 50HZ	732 211 601	A	Nut, nyloc M6
543 046 893	E	MOTOR 1KW 115V 2P 50HZ	732 211 801	A-B-C	Nut, nyloc M8
543 059 430	A	MATERIAL STOP	732 212 001	B	Nut, nyloc M10
543 069 841	A	Angular guide	732 212 201	D	Nut, nyloc M12
543 071 575	D	Flange, outer	735 215 301	A	Washer, spring 6
543 072 004	A	Ruler, right, TS73R	735 311 000	C	Locker clips, steel, ext d.8
543 072 005	A	Ruler, left, TS73R	738 219 804	C	BEARING 608 (for roller supplier)
543 072 245	E	Sticker, "Risk of cut"	543 850 428	E	Bypass tee : pump 25W
543 072 749	D	Wire protection	543 850 429	E	Filter with tube end
543 072 751	B	Locking latch	543 850 455	E	Adaptator for filter
543 073 180	E	Cap, plastic (on water pump)			
543 850 013		Screw, wing M6x 18 (Plastic)			
543 850 017	E	Nylon tie 5x250			
543 850 039	E	Electric isolated pod, female			
543 850 089	E	Electric isolated pod, male			
543 850 093	D	Washer, 30x16.1x1.5			
543 850 100	D	Water valve			

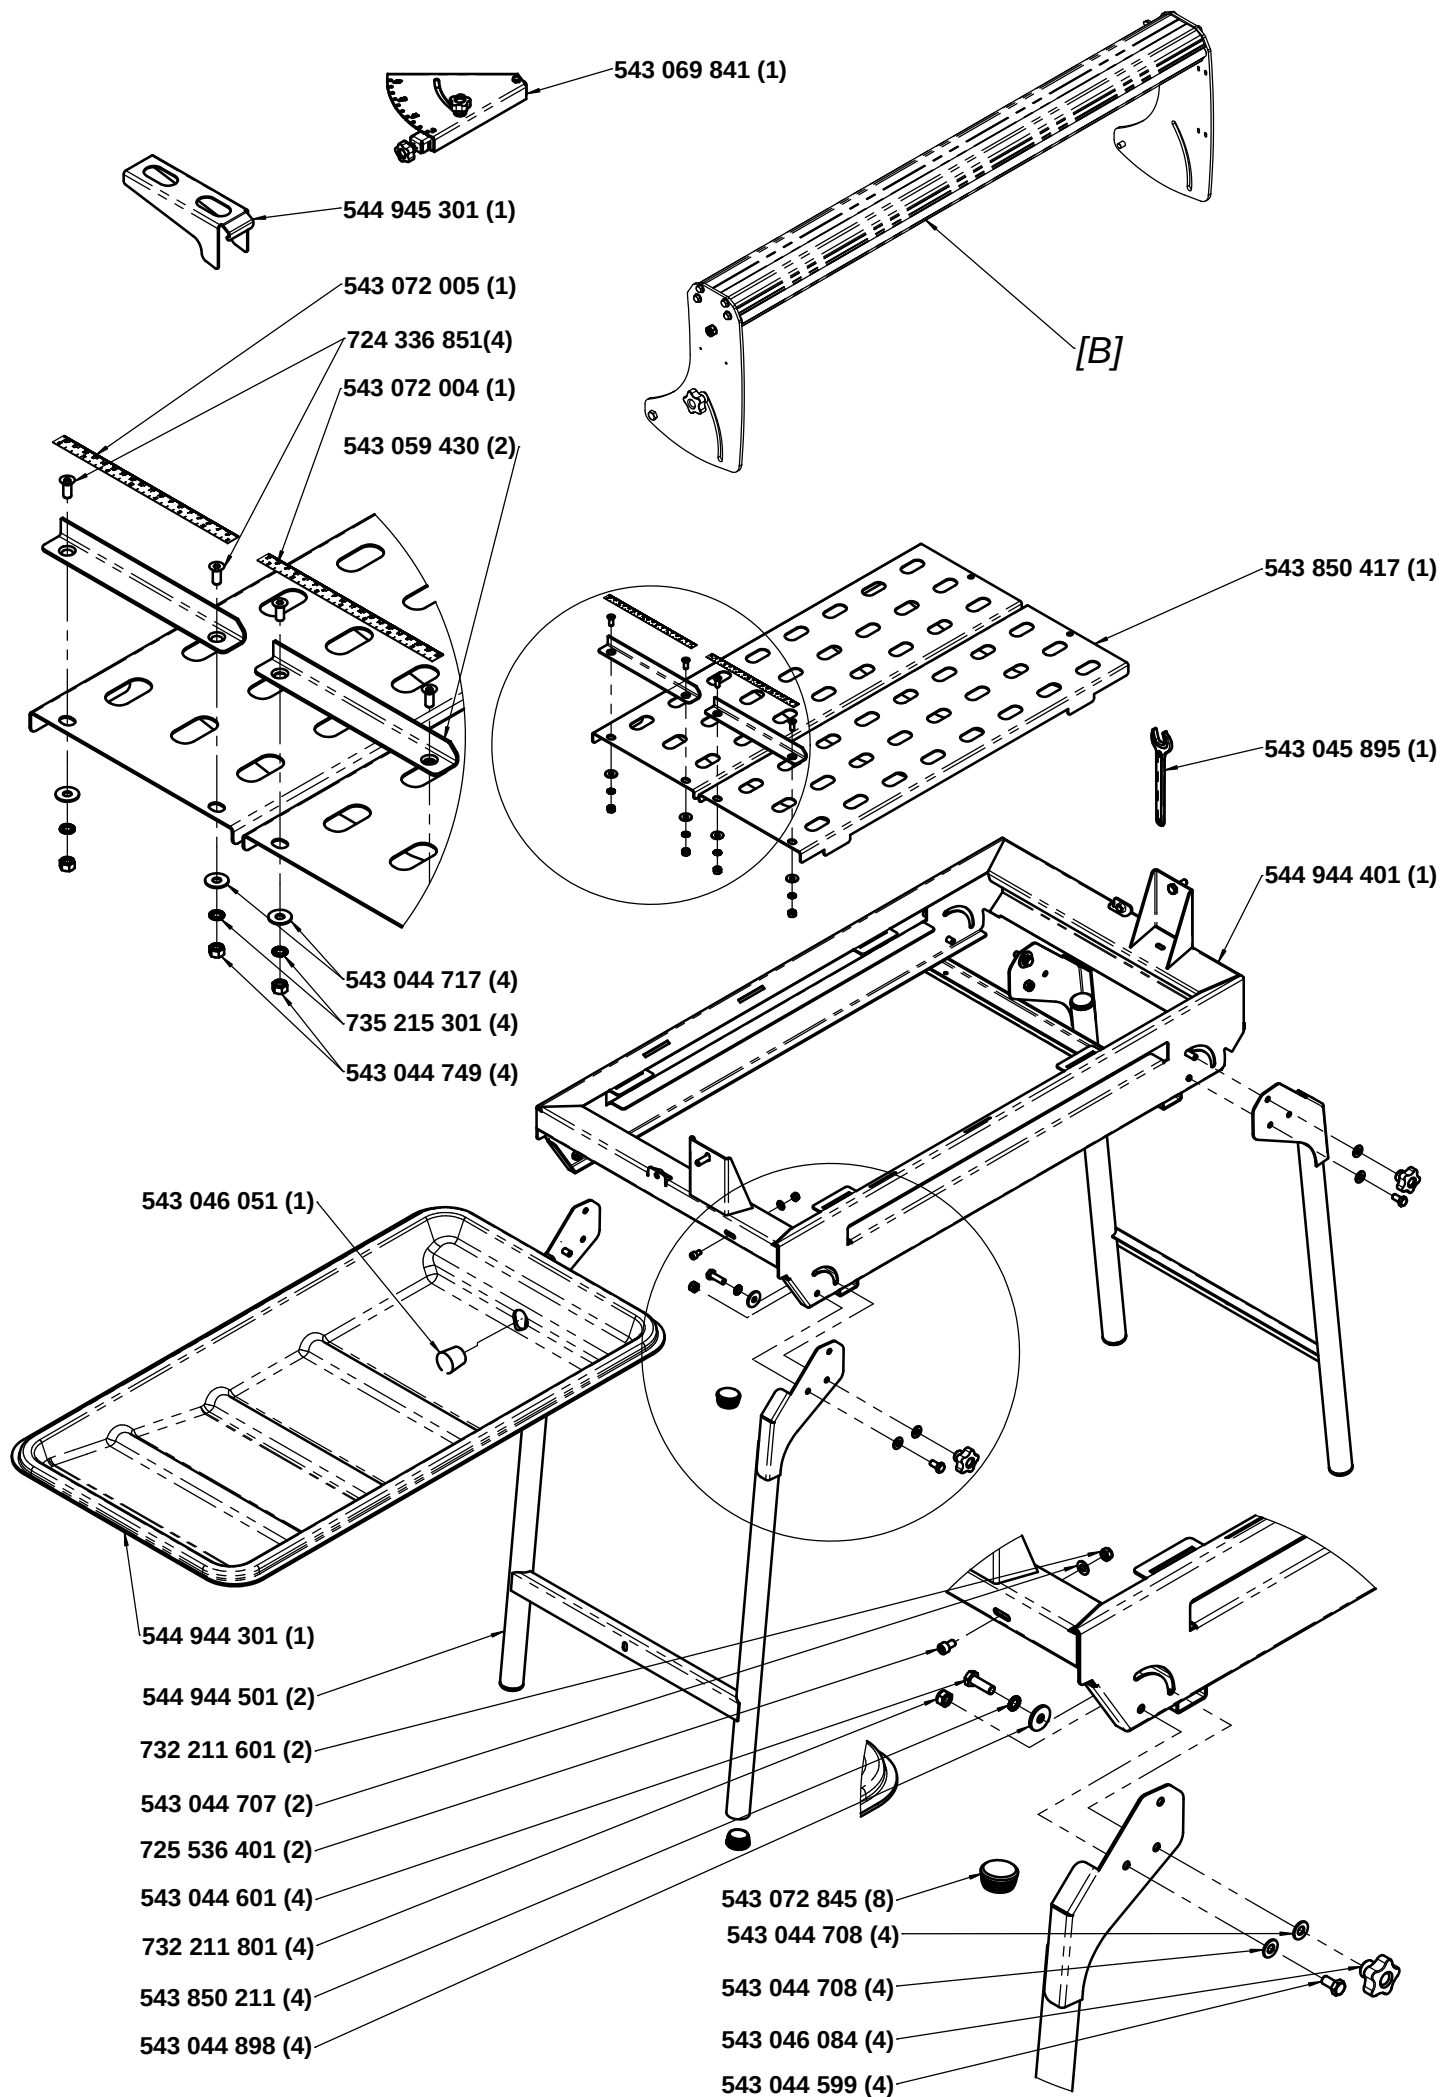

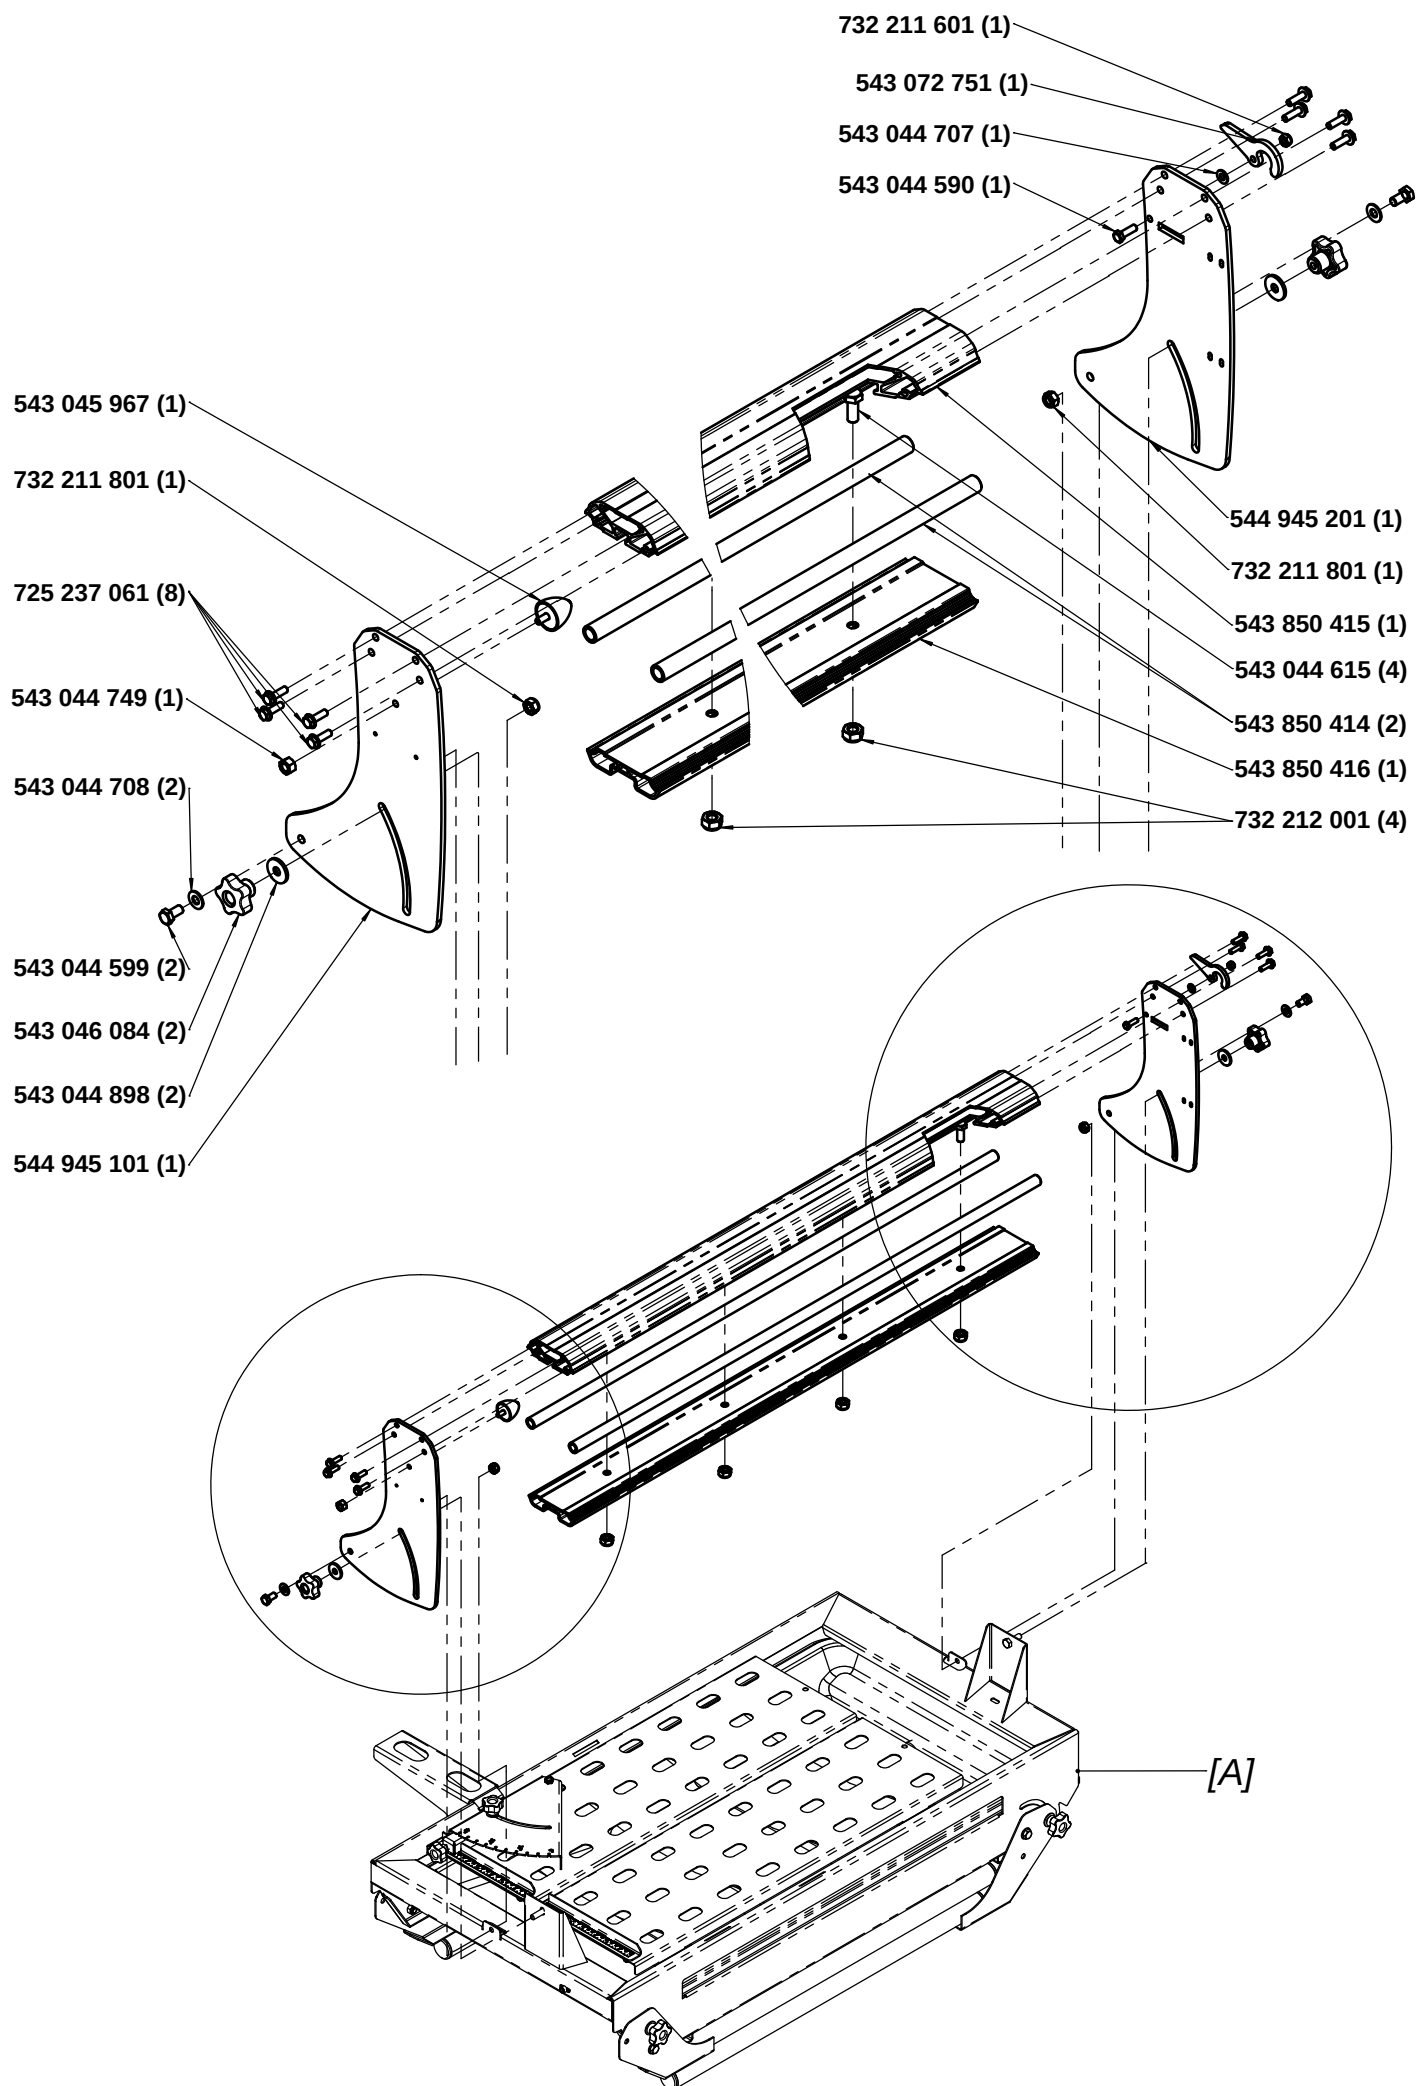

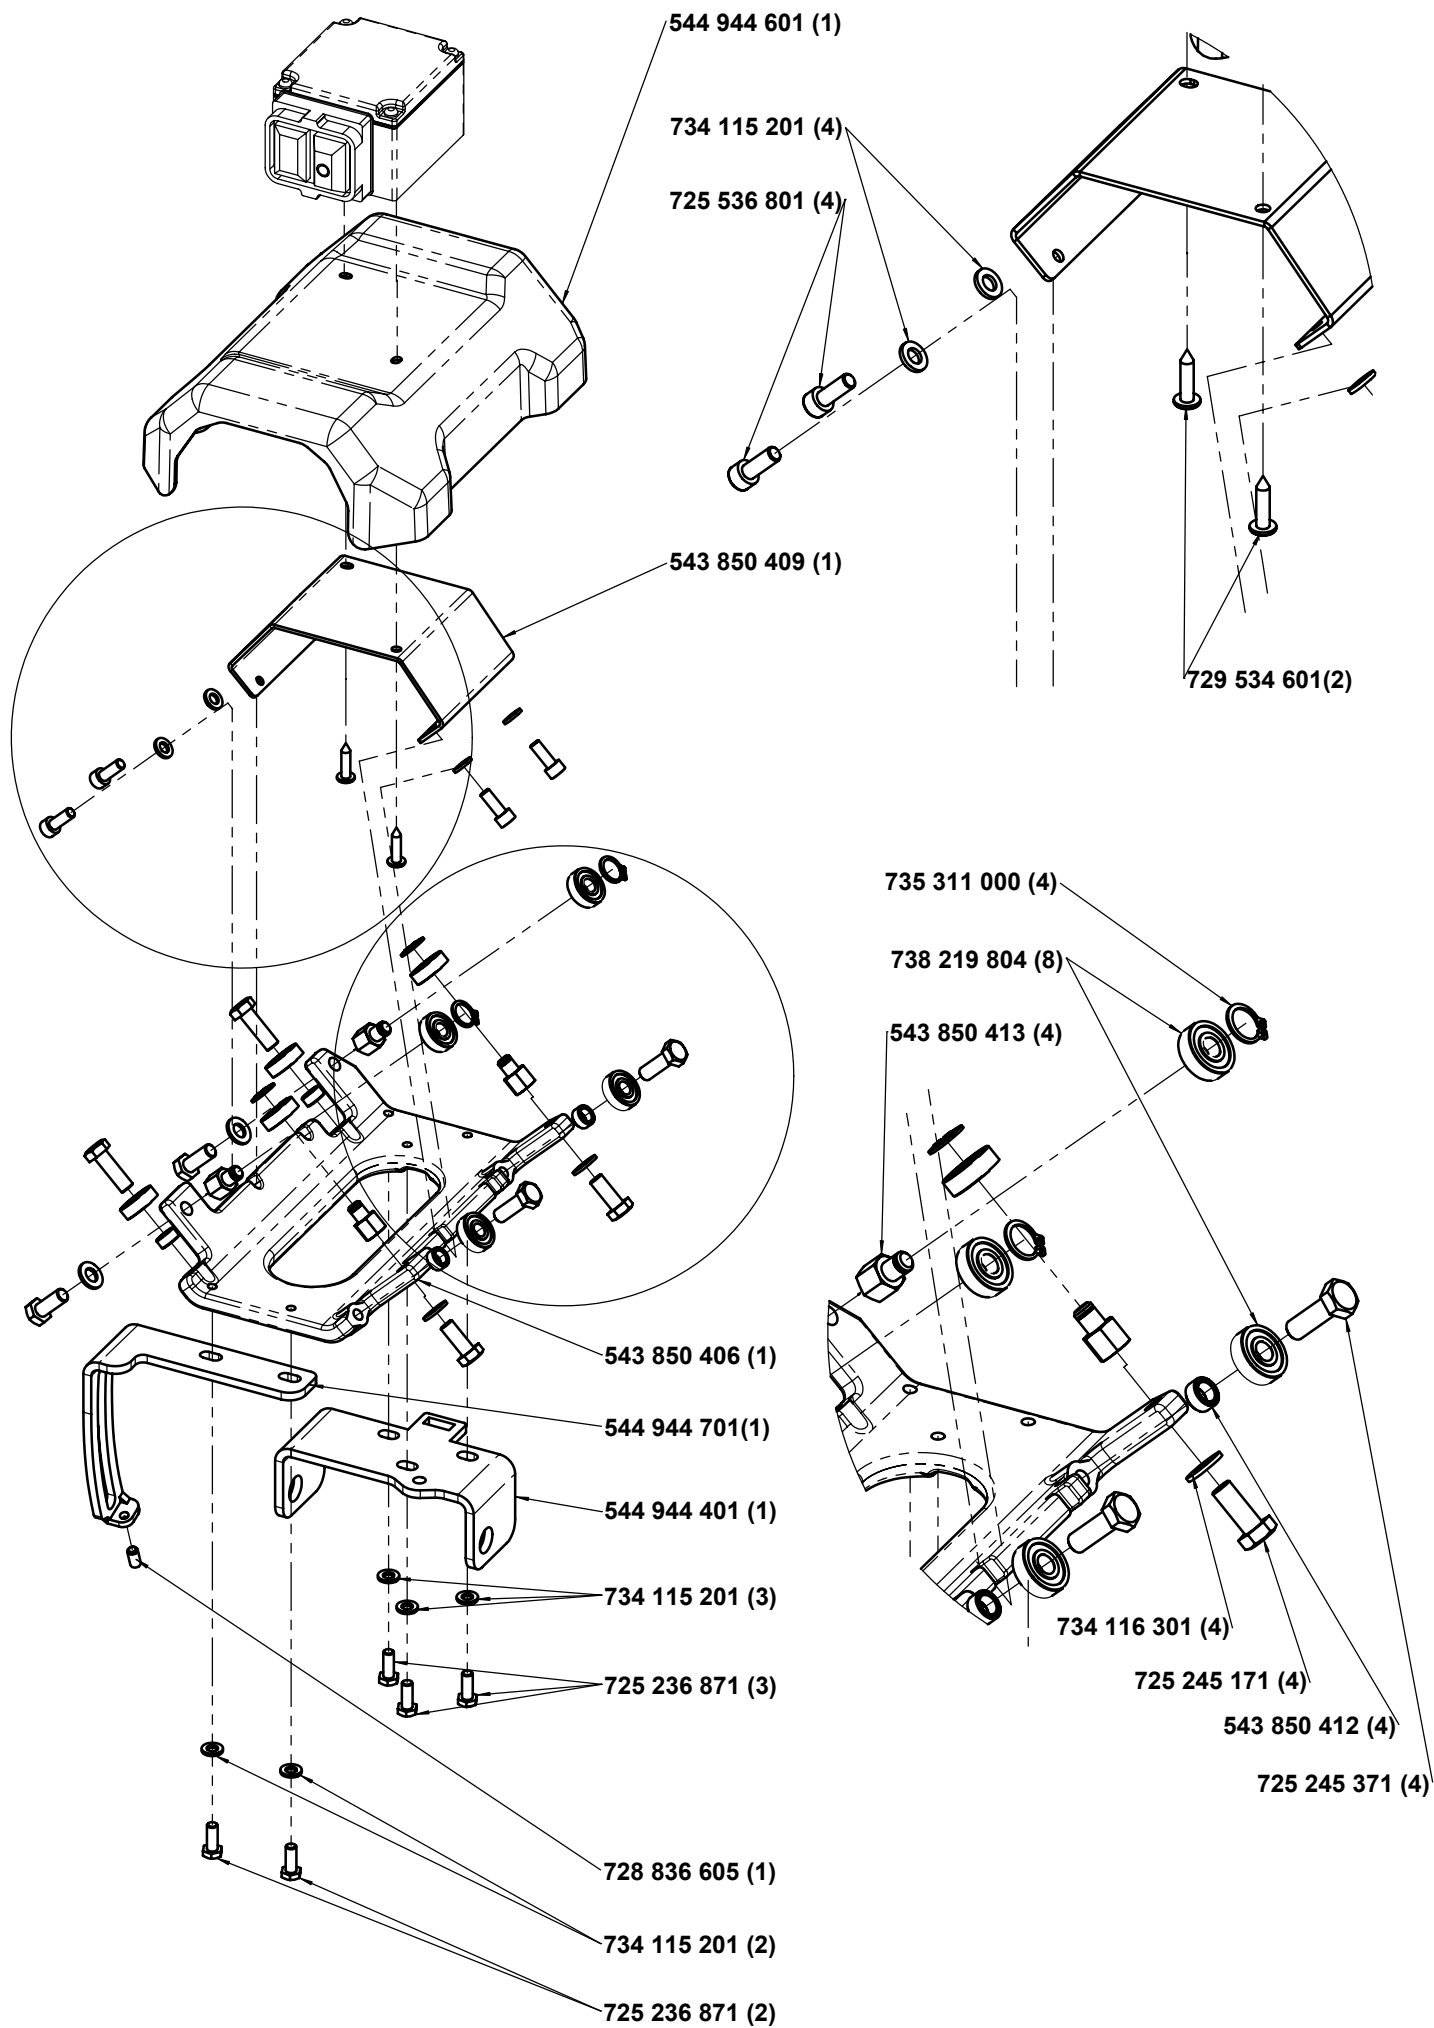

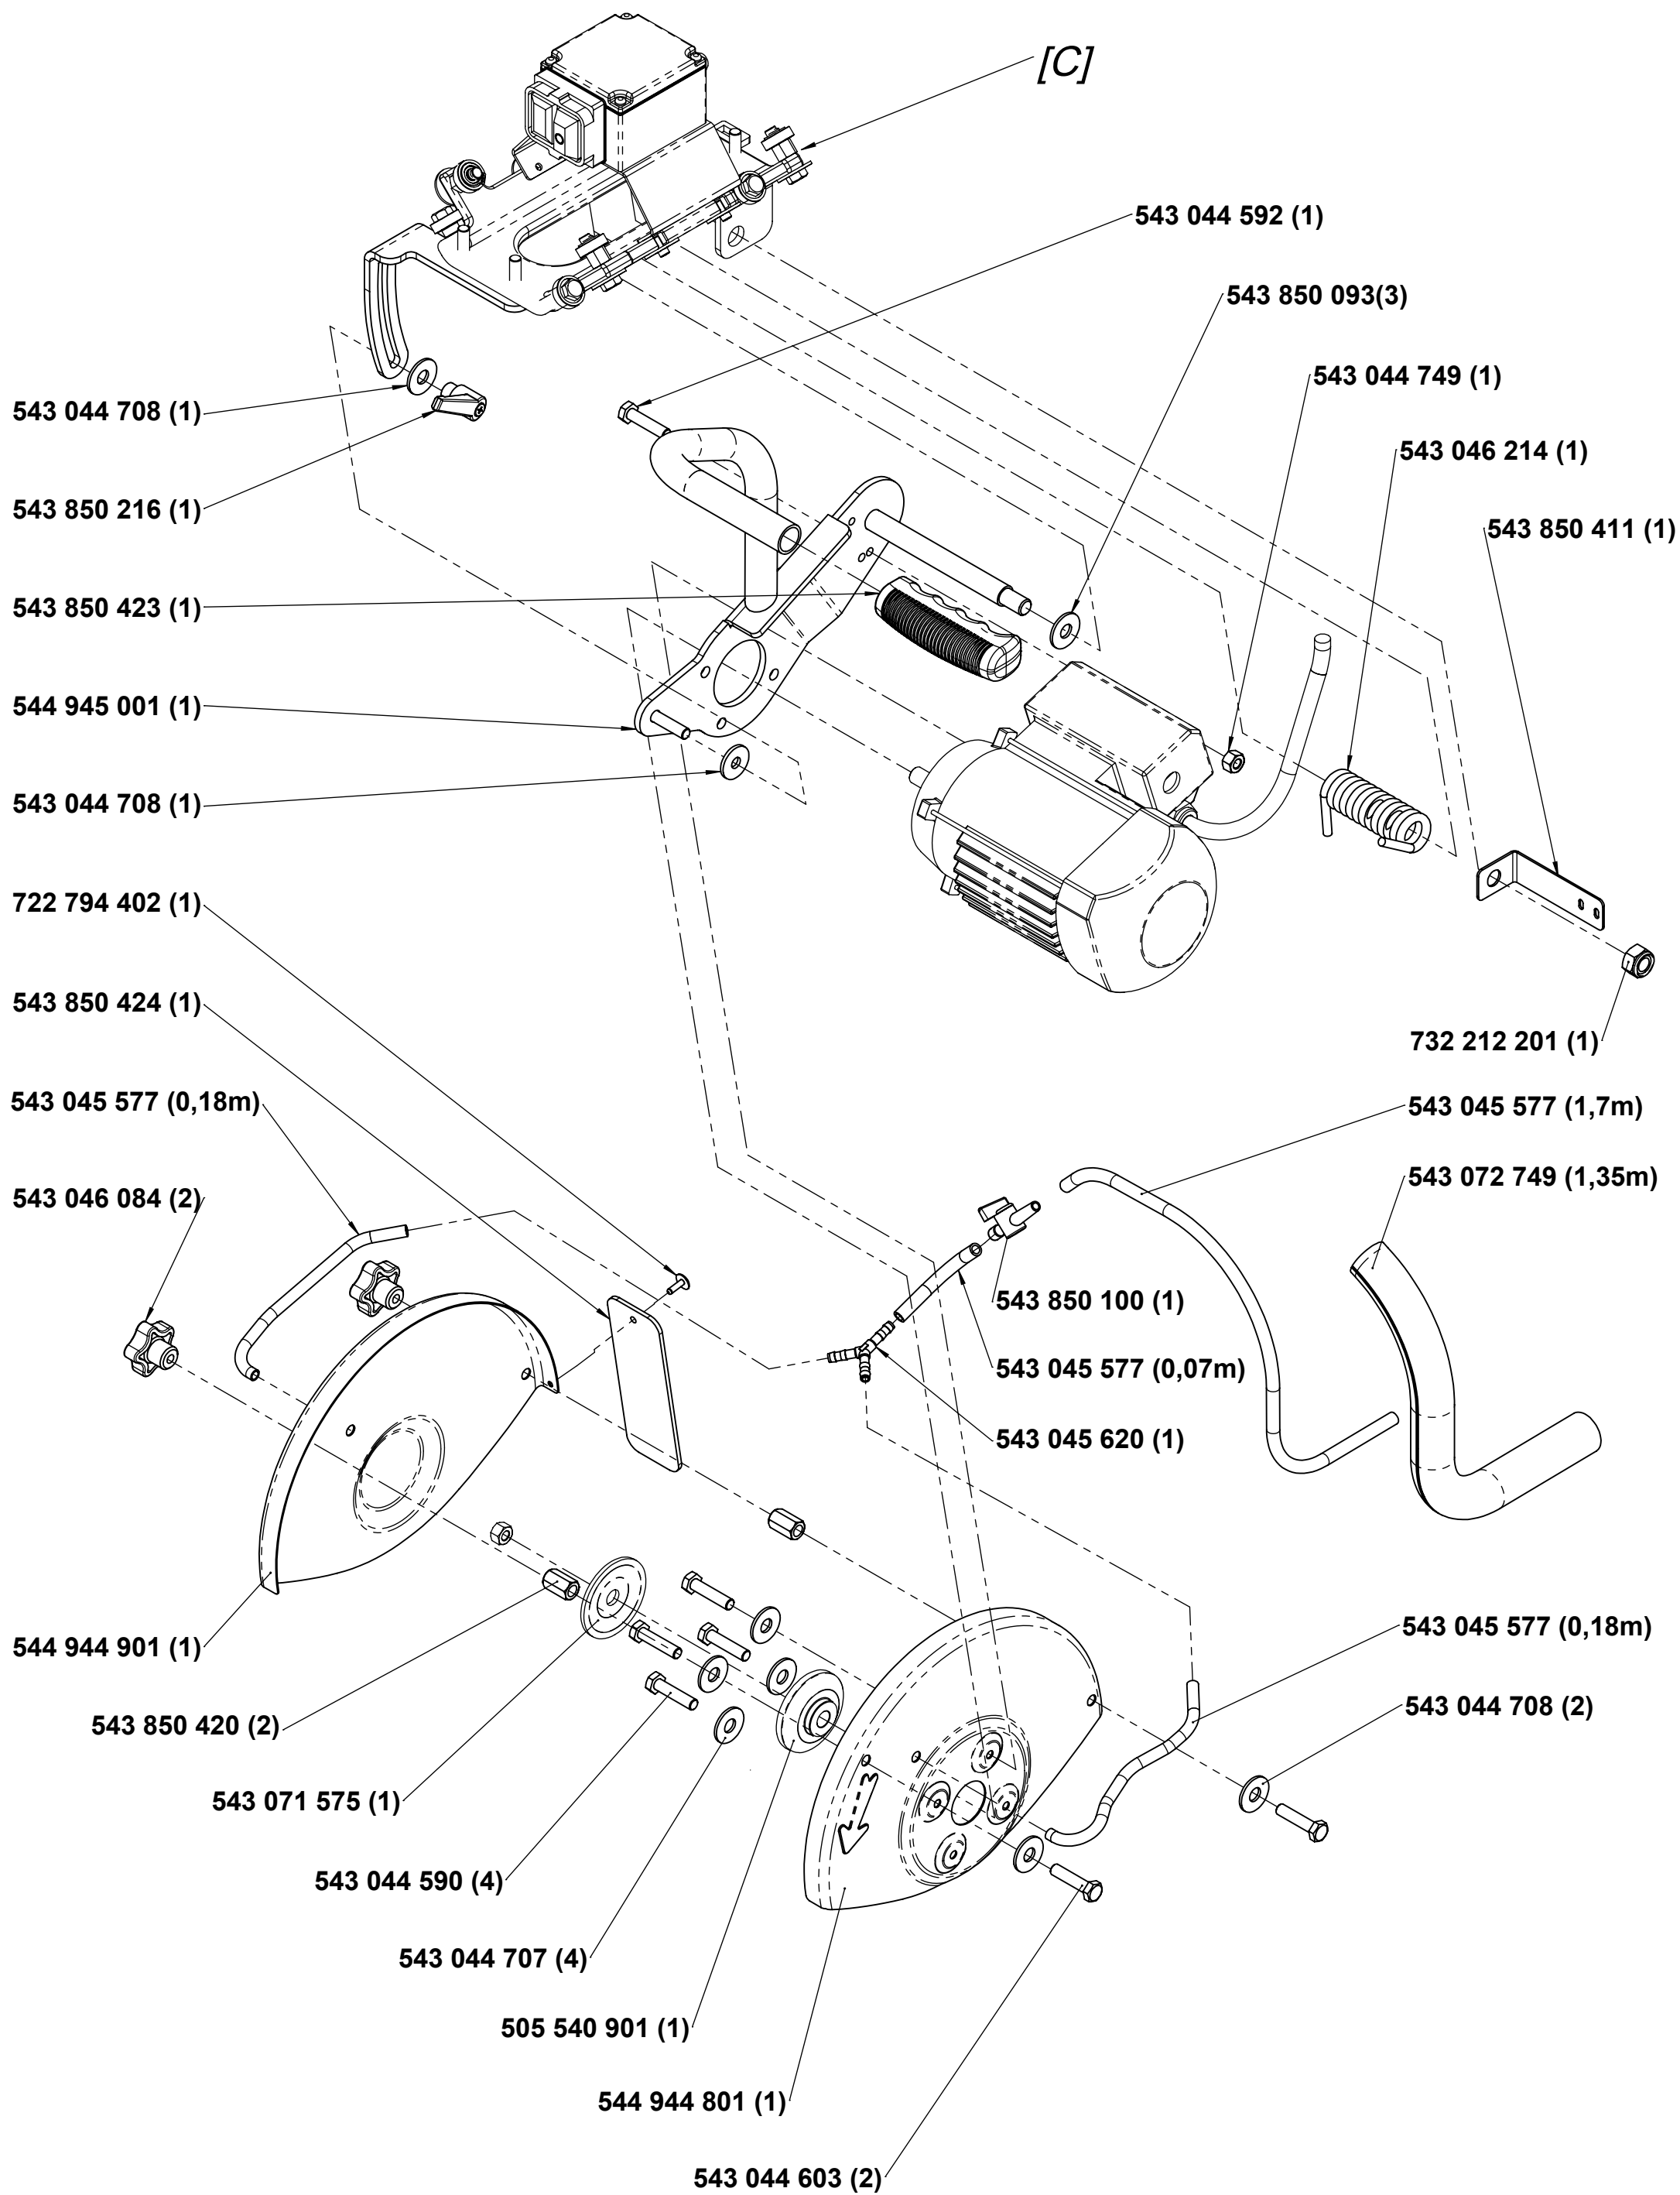

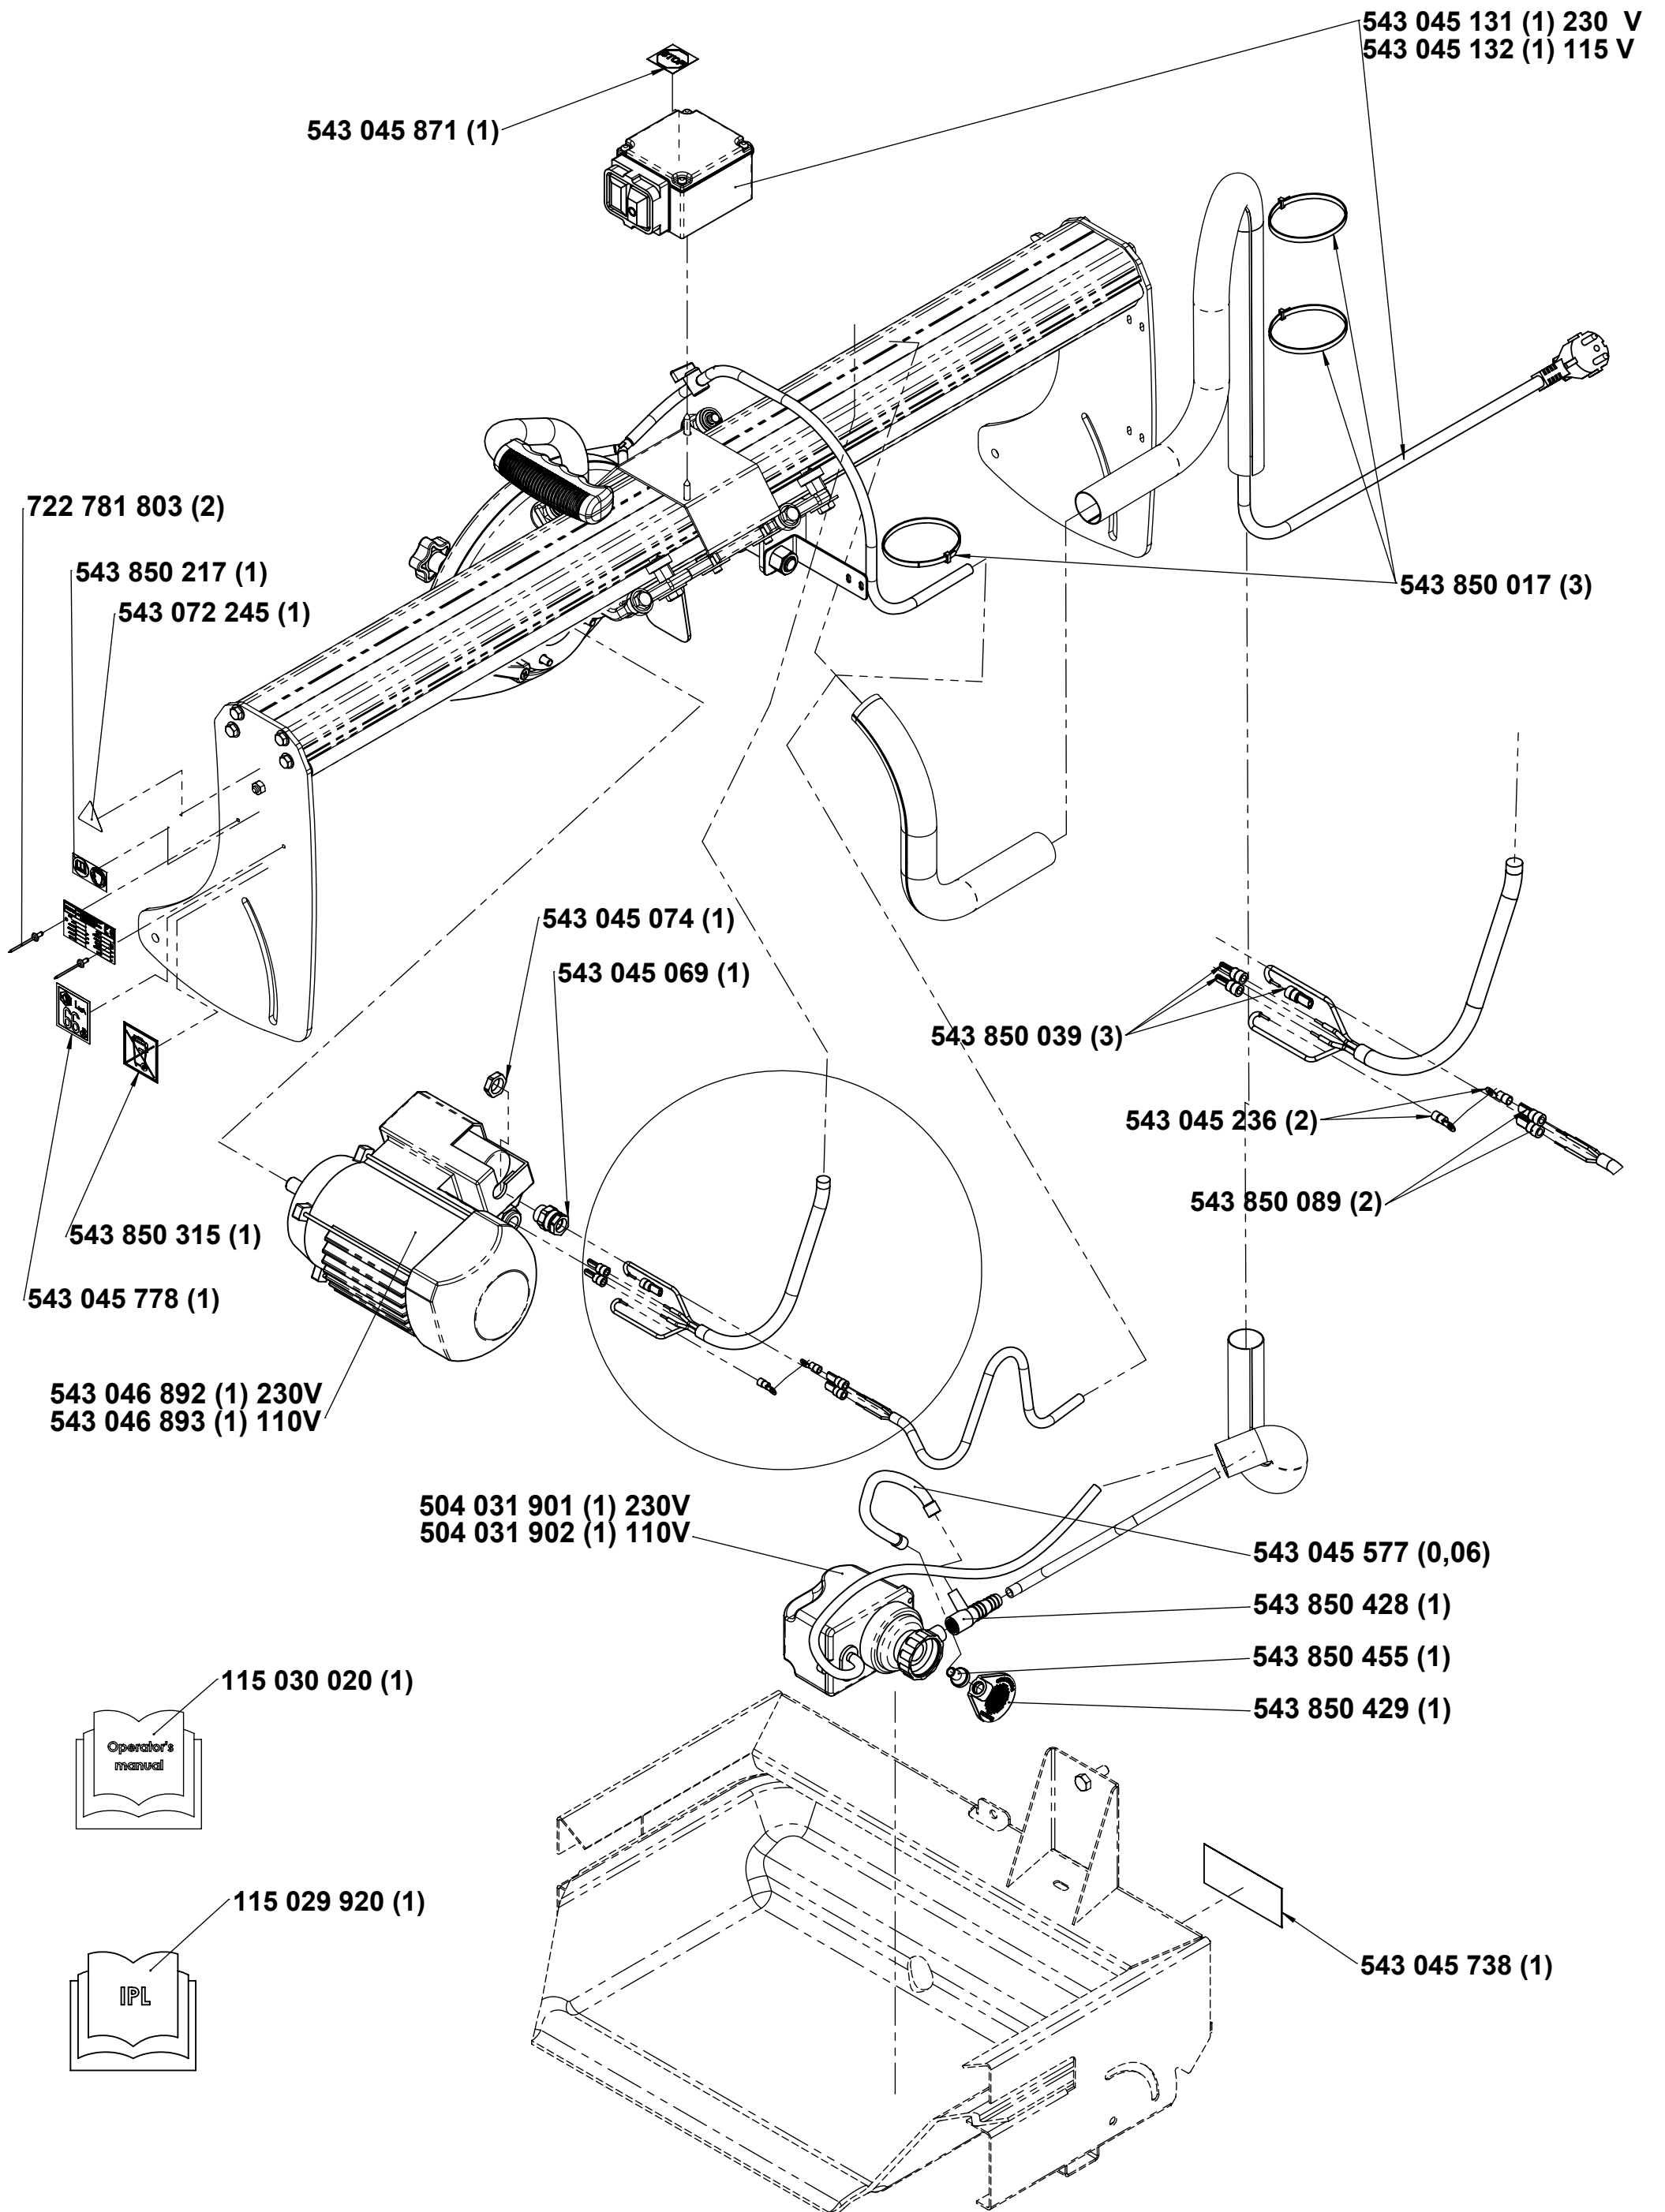



www.husqvarnacp.com